DPF SERIES

7 INCH DIGITAL PICTURE FRAME

MODEL DPF7J-MANUAL

Table of Contents

1. Product Introduction 3
2. Package Contents 3
3. Features 3
4. Specifications 4
5. Controls and Slots 5
6. Setting up the Digital Picture Frame 5
7. Remote Control 6
8.Quick Guide 7

1.Product Introduction

Congratulations on your purchase of our 7 Digital Picture Frame, model DPF7J. Boasting high-quality image resolution, the Digital Picture Frame is the perfect product for displaying your favorite digital photos, music and video files. With its ease of use, you can now display all your favorite digital pictures, music or video files for everyone to see and hear!

2.Package Contents

Before using the Digital Picture Frame, be sure to check that all accessories contained in the package are present:
A. Digital Picture Frame x1f
B. AC Adapter x 1
C. Remote Control x1
D. User Manual x1
E. Standx1

3. Features

- Displays pictures, music and video
- Listen to MP3 audio while displaying photos
- Simple operation, insert the compact card into the Digital Picture Frame to view the pictures, video or listen to MP3's
- Support: CF/ MD-MS/ SD/ MMC-SM/ XD/USB DEVICE
- TFT-LCD screen with high resolution, wide view angle and rich color
- Easy to use remote control for displaying and managing your files
- Built-in stereo speakers

4.Specifications

Type	DPF7J
Unit Size(mm)	240(H) x 160(V) x 32.5(D)
Display Area(mm)	154.08(H)x 86.58(V)
Resolution	480 x234
Colors	262,144
Brightness	330cd/m2 max.
Contrast Angle	300:1
Viewing Angle	60/60 (L/R),40/60(U/D)
Input Voltage	AC100—240V(50HZ/60HZ)
Operation	0℃---50℃
Net Weight(kg)	0.55
Media	MPEG1/2/4, MP3/JPEG
Card	CF /MD/MS/SD/MMC/SM/XD
Auto Start Mode	Auto Slide Show JPEG
Photo Playback Mode	1.Loop, Zoom In 2.Auto Slide Show 3.Slide Show with background MP3 music 4.File name, File size, Resolution, Date Display 5.Interval Time Setup 6.Transition Setup 7.Play/Stop/Pause
Music Playback Mode	1. Play/Stop/Pause 2. Volume Adjust 3. Mute Function 4. Repeat Model Setup 5. File Type, Total Time, Date, Display
Video Playback Mode	1. Play/Stop/Pause 2. Volume Adjust 3. Mute Function 4. Zoom in 5. File information, Time and Date Display
Accessories	1. Remote Control 2. AC Adapter 3. Operation Manual

5.Controls and Slots

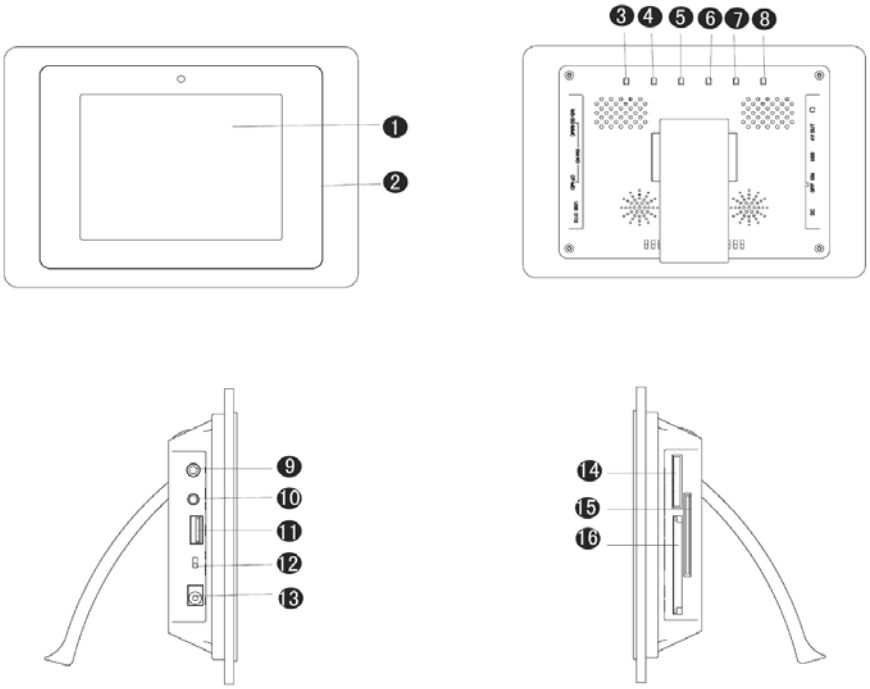

1.Display	5. Right	9.Audio Out	13.DC Power
2.Decortaive Frame	6. Left	10. AV Out	14. MS/ SD/ MMC
3. Down	7.Shift	11. USB DEVICE	15.SM/XD
4. Up	8. Play	12. On/Off	16.CF/MD

6. Setting up the Digital Picture Frame

A. Open the package and remove the protective foam. Remove the protective sleeve from the unit.
B. Plug in the AC adapter into power outlet. Plug the other end into the unit.
C. After the content is stored on the target flash media, insert the media into the proper slot.
D. Turn power to on position via the On/Off switch. The power switch is on the right side of the Digital Picture Frame.
E. As default, the first file in the card will be displayed first. The play sequence is sorted by the file name alphabetically automatically, regardless of file type. Therefore, an MP3 could be played first, followed by a second MP3 or an image or a video.

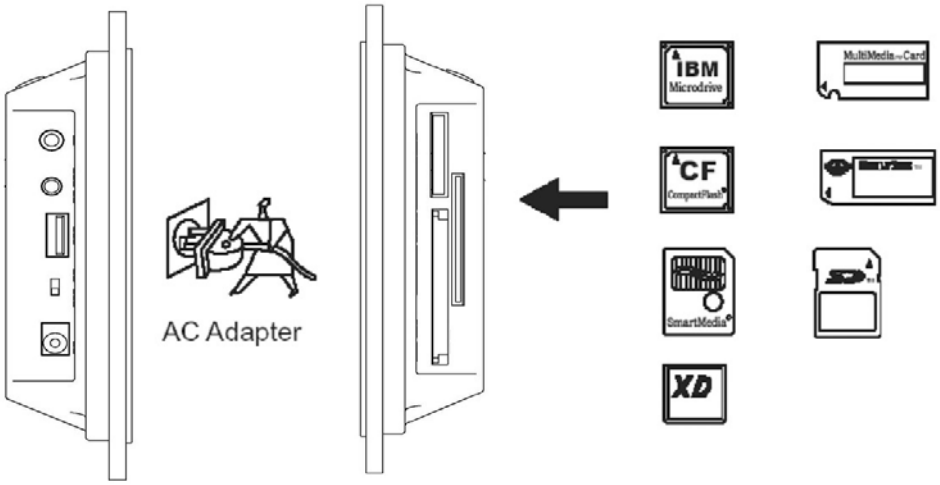

7. Remote Control

The following table briefly describes the remote control functions

BUTTON	DESCRIPTION
POWER	Turn it on or off
- (VOLUME)	Lower volume
+ (VOLUME)	Raise volume
Enter	Confirm selections on the screen
▲	Move up when selecting on the screen
◄	Move left when selections on the screen
►	Move right when selecting on the screen
▼	Move down when selecting on the screen

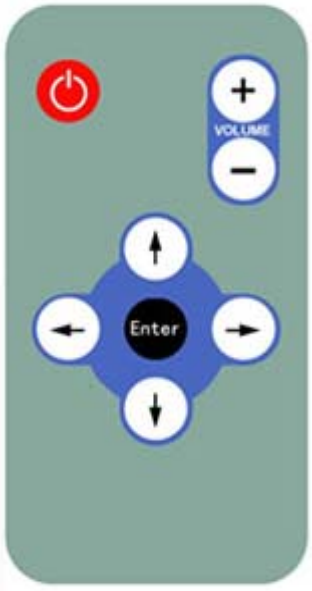

Quick Guide

Initial Setup

A. Removing the protective bag on parts.
B. Attaching the Digital Frame Stand.
C. Insert the memory card.
D. Connecting to a power source.

Enjoying Files

A. The digital photo display is initiated. If music and photos are both in memory card, a music photo slideshow will be displayed.

B. Press **ENTER** key, the icon is shown below.

C. Use **LEFT** or **RIGHT** button selects key, press **ENTER** key the Photo Thumbnails Screen is shown below.

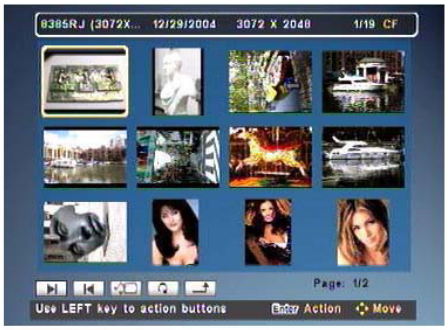

D. Press **ENTER** key again, the icon is shown below. Then the photos will be displayed in slideshow.

E. Press the **ENTER** key, the Photo Thumbnails Screen appears again. Then press **LEFT** key twice, use **ENTER** key, the Home Page Screen display. You can use four arrow keys select six functions discretionarily.

NOTE:

	Next		Previous		Pause/Play
	Rotation		Magnifier		Information On/Off
	Return to Previous				Music +Photo Slide Show